



HOLDER FOR SPREADER BAR

- Wall mounted holder to neatly store all standard Winncare spreader bars
- The spreader bar can be taken out from the holder easily
- Ready to use with mounting holes for easy setup
- **Length:** 235 mm
- **Height:** 47 mm
- **Depth:** 42,5 mm



USE THE WALL TO FREE UP SPACE AND KEEP THE WORK AREA CLEAR AND TIDY

Winncare holder for spreader bars is the perfect storage solution to maximize the usability of your space.

Mount to the wall near the workspace and store the spreader bar against the wall to keep the work area clear.

Mount two or more holders for storage and overview of multiple spreader bars.

For more information visit

www.winncare.com

Email: info@winncare.dk

Phone: +45 7027 3720